

DPG1M

The DPG1M has three operation buttons.



Figure 7: DPG1M operation buttons

Each button has a specific function:

Symbol	Description	Function
	Reminder	Setting reminders
	Bluetooth®	Connecting the Desk Control™ App via Bluetooth® wireless technology
	Favourite	Saving favourite positions

Operate the desk panel by tilting it.

- 1. Tilt and hold up DPG1M to drive desk up, press and hold down DPG1M to drive desk down.
- 2. Release DPG1M when you have reached your requested position.

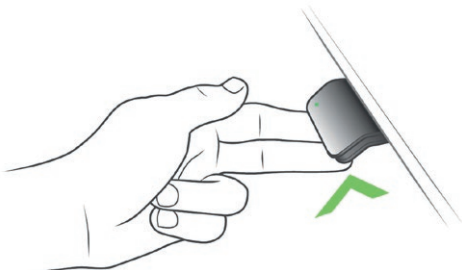


Figure 8: Tilt and hold the DPG1M to drive the desk up

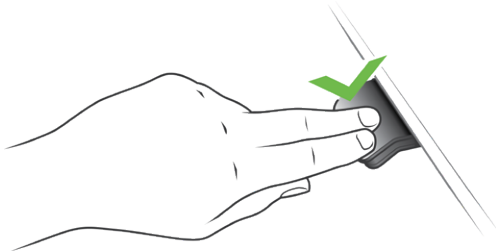


Figure 9: Press and hold the DPG1M to drive the desk down

Desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height.

Setting upper limit

- 1. Adjust desk to maximum allowable height.
- 2. Press and tilt DPG1M up at the same time until light flashes.
- 3. Release and DPG1M.

Setting lower limit

- 1. Adjust desk to minimum allowable height.
- 2. Press and press DPG1M down at the same time until light flashes.
- 3. Release and DPG1M.

Favourite positions

Saving favourite positions

1. Adjust desk to a preferred position.
2. Press ★ button for two seconds.

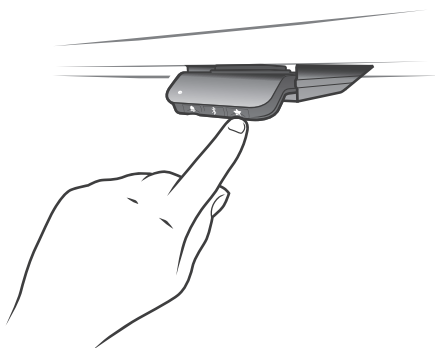


Figure 10: Saving favourite positions

The LED flashes white two times to indicate that saving the position is in progress. Not until the LED becomes static white, has the position been saved.

If the user adjusts the desk to another position and saves this position, it will overwrite the favourite position closest to the current position.

Driving to favourite positions

After saving the favourite positions, the user can reach the positions simply by tilting/pressing the DPG1M.

1. Tilt/press and hold - when a saved position has been reached, the desk stops.
2. Release DPG1M within one second.

This way the user can easily change between sitting and standing height without looking at the DPG1M in the meantime.

When the desk stops at a favourite position, the user can

- continue to tilt/press the DPG1M for one second

or

- release the DPG1M and immediately tilt/press it again.

The desk will move past the favourite position and continue its movement.

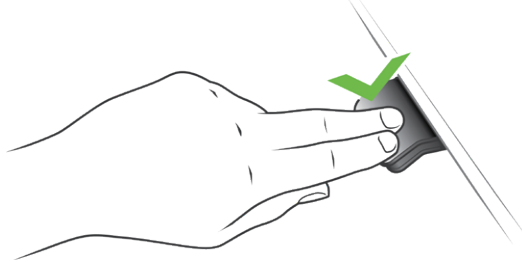


Figure 11: Tilt/press to drive desk

Automatic driving to favourite positions

(only possible for "Full version" with "Automatic drive" enabled in the app)

1. Double-tap DPG1M to let desk adjust automatically to first position in direction of double-tap.
2. Simply tap DPG1M once to stop driving of desk between two favourite positions.

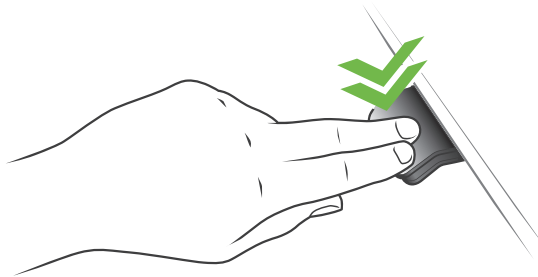


Figure 12: Double-tap to automatically adjust the desk to a favourite position

Erasing favourite

1. Press the ★ button for eight seconds to erase all saved favourite positions.

The LED flashes red when all the favourite positions are erased.



Figure 13: Erase favourite positions

Bluetooth®

Connecting Bluetooth®

1. Download Desk Control™ App suited for your device in App store or Google Play.

Search for Desk Control and look for the app icon:



2. Press ✱ button in the middle for two seconds to enable pairing mode.

The LED flashes blue while the desk panel is in pairing mode.

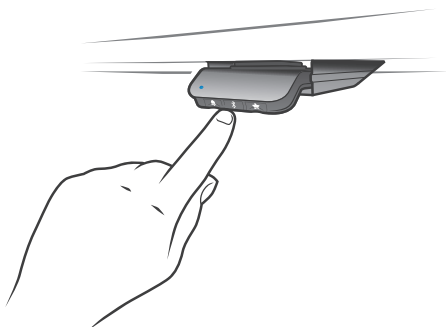


Figure 14: Connect Bluetooth®

Reminder

The reminder LED is placed in the lower left corner of the DPG1M. The LED is intended to indicate the position of the desk (sitting or standing height). The indication depends on the reminder interval chosen.

While the user is sitting for an appropriate amount of time according to the set interval, the LED calmly pulsates green. When the sitting interval runs out, the calm pulsating green turns into fast pulsating orange for one minute hereafter into static orange to indicate that the user should adjust the desk to standing height. In standing height, the LED pulsates green until a potential timeout. When the desk is adjusted back to sitting height, the LED pulsates green until the reminder goes off again.

Reminder restart

The reminder automatically restarts when the desk is lowered to sitting height.

Reminder timeout

After four hours without any action, the LED will time out. When the DPG1M is tilted, the green light turns back on.



When the LED is enabled for reminders, the DPG1M is no longer in ZERO™ mode as long as the light is on/active.



Figure 15: Pulsating green LED indicates no need to drive desk up



Figure 16: Pulsating orange LED indicates that the user needs to drive his/her desk up

Reminder intervals

The LED lights up in three different intensities each representing an interval. The three standard intervals are:

- Interval 1: Reminder after 55 minutes sitting
- Interval 2: Reminder after 50 minutes sitting
- Interval 3: Reminder after 45 minutes sitting

The default interval is reminding after 55 minutes, which means the LED lights up in the weakest intensity.

Adjusting the reminder interval

1. Press 📌 button to adjust interval of getting reminded to change position.
2. Toggle through intervals by pressing 📌 button.

When the LED is not lit, the reminder is turned off.

Through the app, it is possible to personalise the three intervals to custom values.

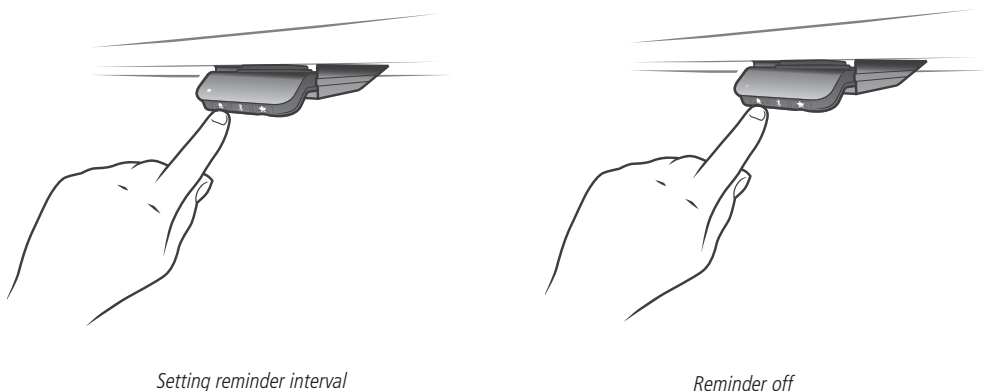


Figure 17: Set the reminder

Resetting the reminder

1. Press 📌 symbol for eight seconds to reset reminder to default values.
- The LED flashes red when the reminder is reset.



Figure 18: Reset reminder